

## 8215 Switch Settings

<b>SW1 (Left Group)</b>			
<b>Switch</b>	<b>Setting</b>	<b>Up</b>	<b>Down</b>
1	Hexadecimal Print 0 used in problem determination to print text in EBCDIC hexadecimal code. Leave DOWN for normal operation	Enable	Disable
2	Serial / Parallel	Serial	Parallel
3	Command Pass Thru	Enable	Disable
4	Page Eject Method - multiple line feed (MLF) for host controlled form length (MLF's send to the printer). Form Feed for printer controlled form length (form feed sent at end of page).	MLF	Form Feed

<b>SW1</b>				
<b>Baud Rate</b>	<b>Switch 5</b>	<b>Switch 6</b>	<b>Switch 7</b>	<b>Switch 8</b>
50	Down	Down	Down	Down
75	Down	Down	Down	UP
110	Down	Down	UP	Down
134.5	Down	Down	UP	UP
150	Down	UP	Down	Down
300	Down	UP	Down	UP
600	Down	UP	UP	Down
1200	Down	UP	UP	UP
1800	UP	Down	Down	Down
2000	UP	Down	Down	UP
2400	UP	Down	UP	Down
3600	UP	Down	UP	UP
4800	UP	UP	Down	Down
7200	UP	UP	Down	UP
9600	UP	UP	UP	Down
19200	UP	UP	UP	UP

<b>SW2 (Right Group)</b>		
<b>Printer Type</b>	<b>Switch 1</b>	<b>Switch 2</b>
IBM 5256	Down	Down
IBM 5224	Down	UP
IBM 5225	UP	Down
Invalid	UP	UP

<b>Cable Address</b>	<b>Switch 6 (Adr 4)</b>	<b>Switch 7 (Adr 2)</b>	<b>Switch 8 (Adr 1)</b>
0	Down	Down	Down
1	Down	Down	UP
2	Down	UP	Down
3	Down	UP	UP
4	UP	Down	Down
5	UP	Down	UP
6	UP	UP	Down
Invalid	UP	UP	UP