




CHECKING ZERO CLIENT
FIRMWARE

CHECKING ZERO CLIENT FIRMWARE

OSD (ON-SCREEN-DISPLAY)


To get to the on screen display navigate your cursor with your mouse to the upper left hand corner. You should see something similar to what our picture is Figure 1 below

FIGURE 1

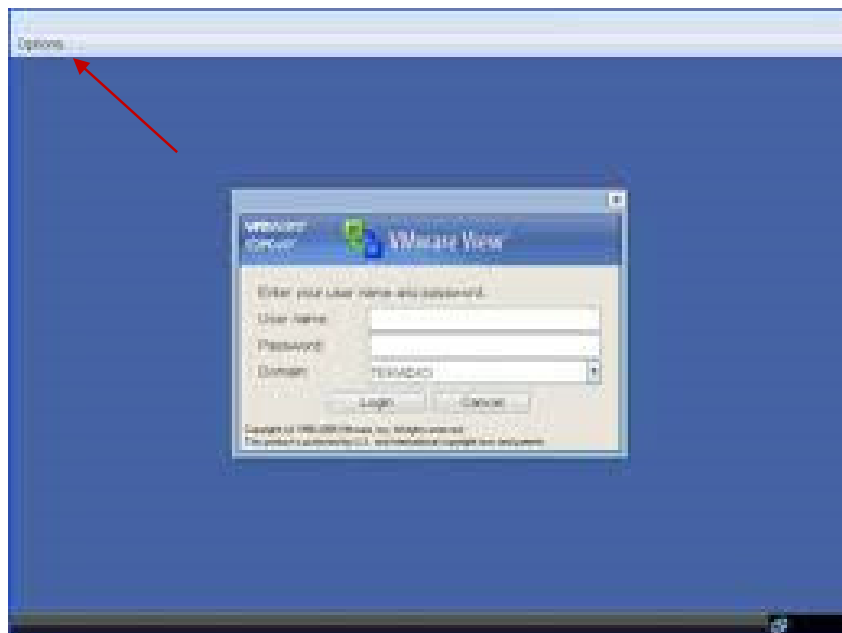

Then Select the Information tab as shown in Figure 2

Figure 2

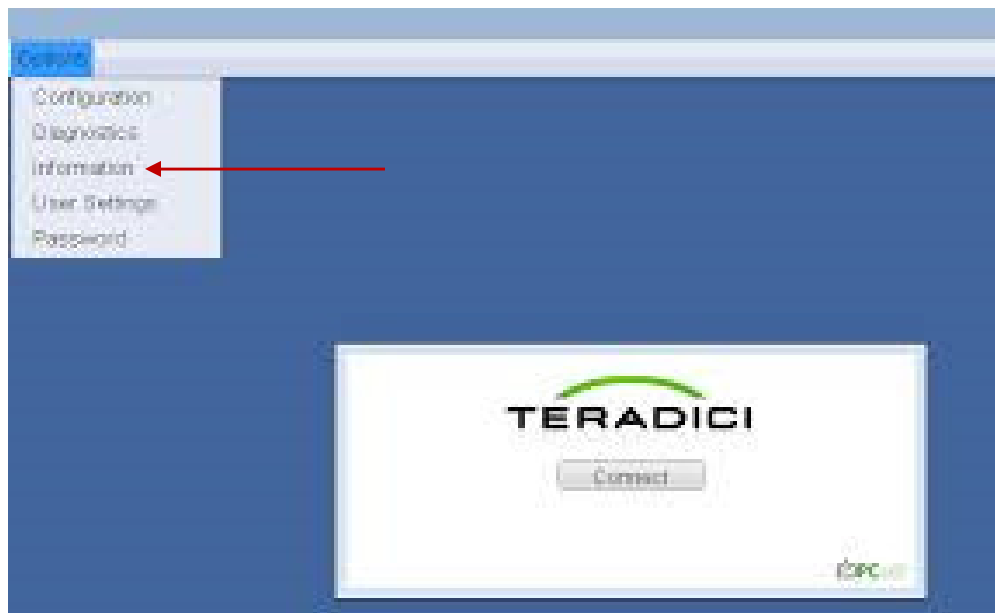





This will display all the unit's info including the current firmware

You can also check using the management console

Sign into the console

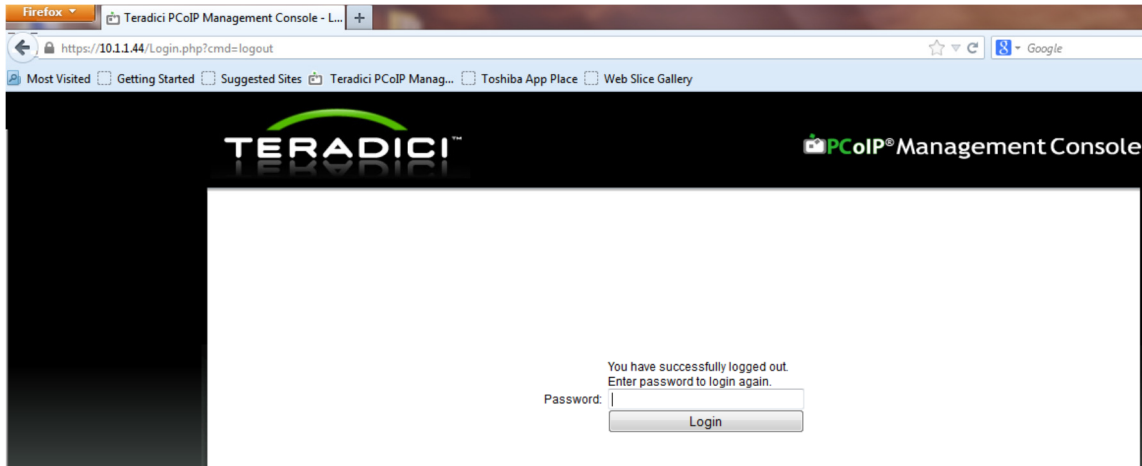

Next select the device tab

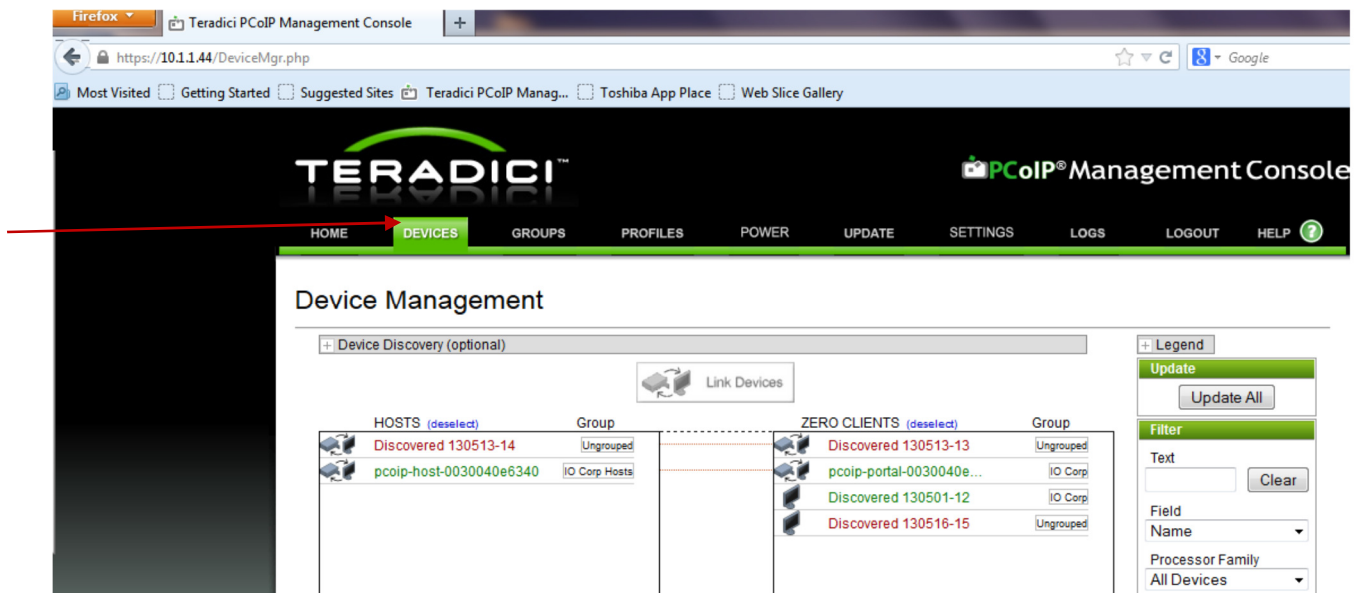

Now select the unit form the zero client list



P: 800-871-9998
W: www.iocorp.com
E: support@iocorp.com





Right click on the unit you wish to display as shown

The screenshot shows the TERADICI PCoIP Management interface. The 'DEVICES' tab is active. Under 'HOSTS', a device 'pcoip-host-0030040e6340' is listed. A right-click context menu is open over a device in the 'ZERO CLIENTS' section, displaying a 'Device Summary' window. The summary includes the following information:

- Name: pcoip-portal-0030040e2db5
- Label: pcoip-portal-0030040e2db5
- Unique ID: 00-30-04-0E-2D-B5
- Mac address: 00-30-04-0E-2D-B5
- FQDN: Not Available
- Firmware: 4.0.2
- Processor: Tera2 ID: TERA2321, rev:0.0
- IP address: 10.1.1.179
- Peered to (MAC): 00-30-04-0E-63-40
- Peered to (IP): 10.1.1.108

At the bottom of the summary window, there are two links: 'Click to view Details' and 'View Device Log'. The 'View Device Log' link is circled in red in the image.

The firmware version will show in the device summary window that opens or you can view it by clicking the device details link



P: 800-871-9998
W: www.iocorp.com
E: support@iocorp.com



TERADICI PCoIP